
# Audio/video system\* some basics

The audio/video system can be used when the ignition switch is in the "ACC" or "ON" position.

For operating instructions, refer to the "Navigation System Owner's Manual" under the heading "AUDIO/VIDEO SYSTEM".

# Type A

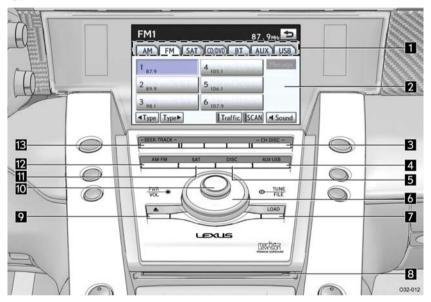

- Function menu tab
  To control the radio, DVD changer, Bluetooth<sup>®</sup> audio player, AUX,
  USB memory or iPod, select the screen tabs.
- ▼ Function menu display screen
  To control the radio, DVD changer, Bluetooth® audio player, AUX, USB memory or iPod, select the screen buttons.
- "CH·DISC" button

  Push the "^" or "∨" button to select a preset station or a selected disc.
- "AUX:USB" button Push this button to turn the Bluetooth<sup>®</sup> audio player, AUX, USB memory or iPod on.

"DISC" button

Push this button to turn the DVD changer on.

6 "TUNE/FILE" knob

Turn this knob to move the station band and files up or down.

"LOAD" button

Push this button to insert the discs.

B Disc slot

Insert discs into the slot after pushing the "LOAD" button.

g "📤" button

Push this button to eject the discs.

"PWR/VOL" knob

Push this knob to turn the audio/video system on and off, and turn it to adjust the volume.

"SAT" button

Push the button to choose a SAT station.

"AM·FM" button
Push this button to choose a radio station. (AM, FM1, FM2)

**IS** "SEEK:TRACK" button

Push either side of this button to seek up or down for a station, or to access a desired track, file or chapter.

Type B



- To control the radio, DVD changer, Bluetooth<sup>®</sup> audio player, AUX, USB memory or iPod, select the screen tabs.
- ☑ Function menu display screen
  To control the radio, DVD changer, Bluetooth<sup>®</sup> audio player, AUX,
  USB memory or iPod, select the screen buttons.
- CH·DISC" button Push the "∧" or "∨" button to select a preset station or a selected disc.
- "AUX:USB" button Push this button to turn the Bluetooth® audio player, AUX, USB memory or iPod on.
- 5 "DISC" button
  Push this button to turn the DVD changer on.
- "TUNE/FILE" knob Turn this knob to move the station band and files up or down.
- "LOAD" button Push this button to insert the discs.

B Disc slot

Insert discs into the slot after pushing the "LOAD" button.

g "A" button

Push this button to eject the discs.

\*\*PWR/VOL" knob

Push this knob to turn the audio/video system on and off, and turn it to adjust the volume.

"FM" button

Push this button to choose an FM station.

"AM" button Push this button to choose an AM station.

"SEEK·TRACK" button Push either side of this button to seek up or down for a station, or to access a desired track, file or chapter.

# Loading discs

## n Loading a single disc

- STEP 1 Push the "LOAD" button.
- When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

## n Loading multiple discs

- STEP 1 Push and hold the "LOAD" button until you hear a beep.
- STEP 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- STEP 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.
- STEP 4 Repeat steps 2 and 3 until you have inserted all discs.

To cancel the operation, push the "LOAD" or "DISC" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

# Ejecting discs

#### n Ejecting a disc

STEP 1 Select the disc to be ejected.

STEP 2 Push the " \_\_ " button and remove the disc.

### n Ejecting all discs

Push and hold the "\_\_\_" button until you hear a beep, then remove the discs.

#### n Using cellular phones

Interference may be heard through the audio/video system's speakers if a cellular phone is being used inside or close to the vehicle while the audio/video system is operating.

# **⚠** NOTICE

### n To prevent battery discharge

Do not leave the audio/video system on longer than necessary with the engine off.

# ${\it n}\ \ {\sf To}\ {\sf avoid}\ {\sf damaging}\ {\sf the}\ {\sf audio/video}\ {\sf system}$

Take care not to spill drinks or other fluids over the audio/video system.